

Manual for Zeutschel book scanner (library basement)

Press "C" to reset system

Insert memory card or USB stick

Choose:

- a) "Drucker" in order to print
- b) "Datei" in order to scan and get a PDF-file
- c) "Drucker und Datei" in order to do both

Place book on scanner

Press the green button on the right side

Check the preview on the screen

If the scan is not to your satisfaction, choose "Löschen" on the screen and make a new scan

If the scan is ok, proceed with the next page(s) until you are ready

Hit "OK" after the last page, otherwise it will not be saved

If you want to create a separate file for a new text, start from the beginning

Remove memory card or USB stick